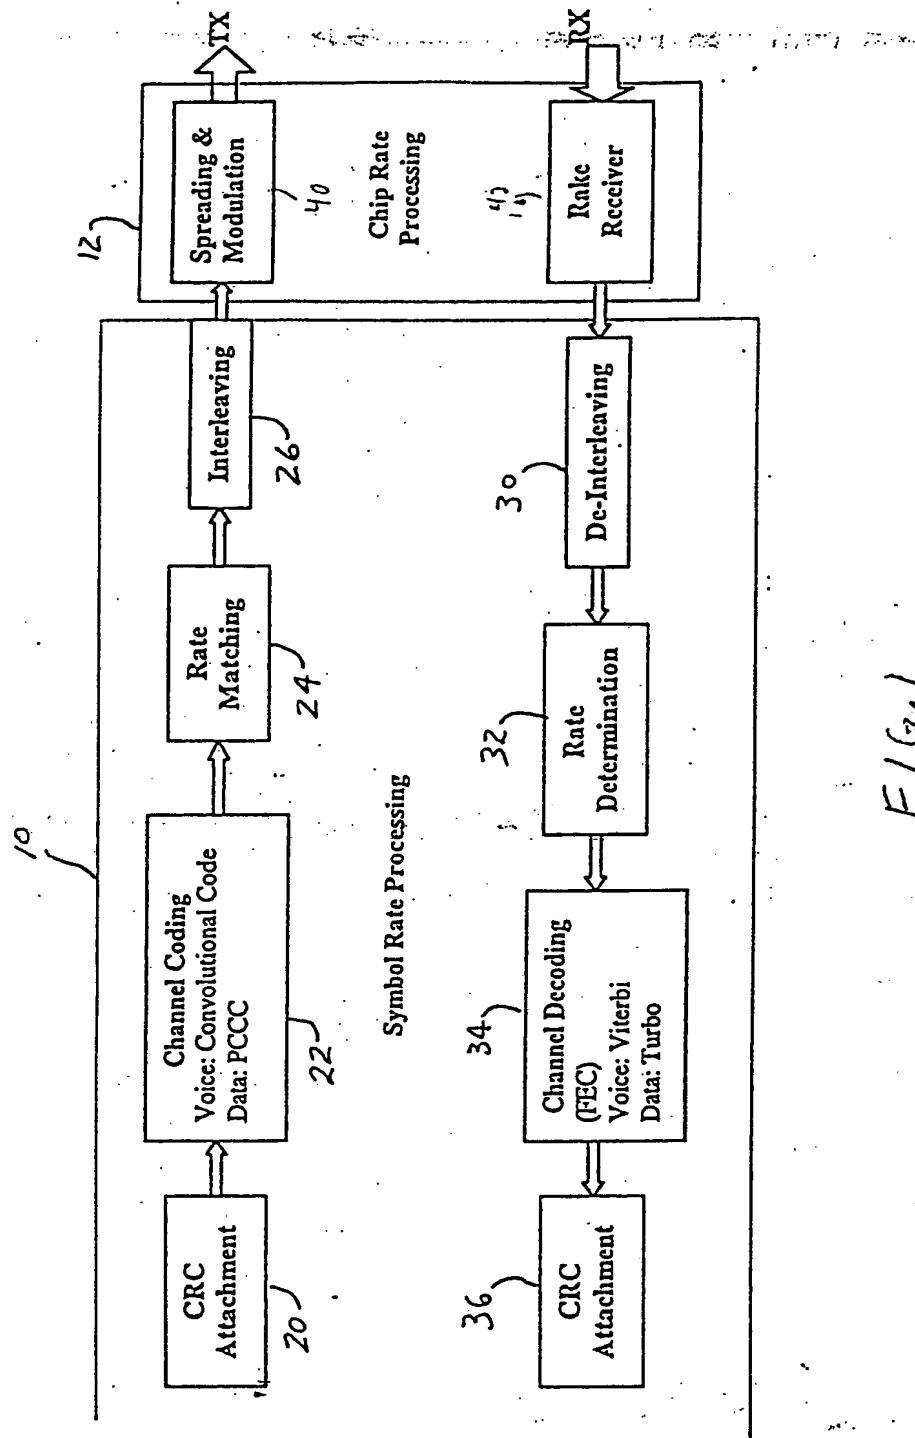


FIG. 1



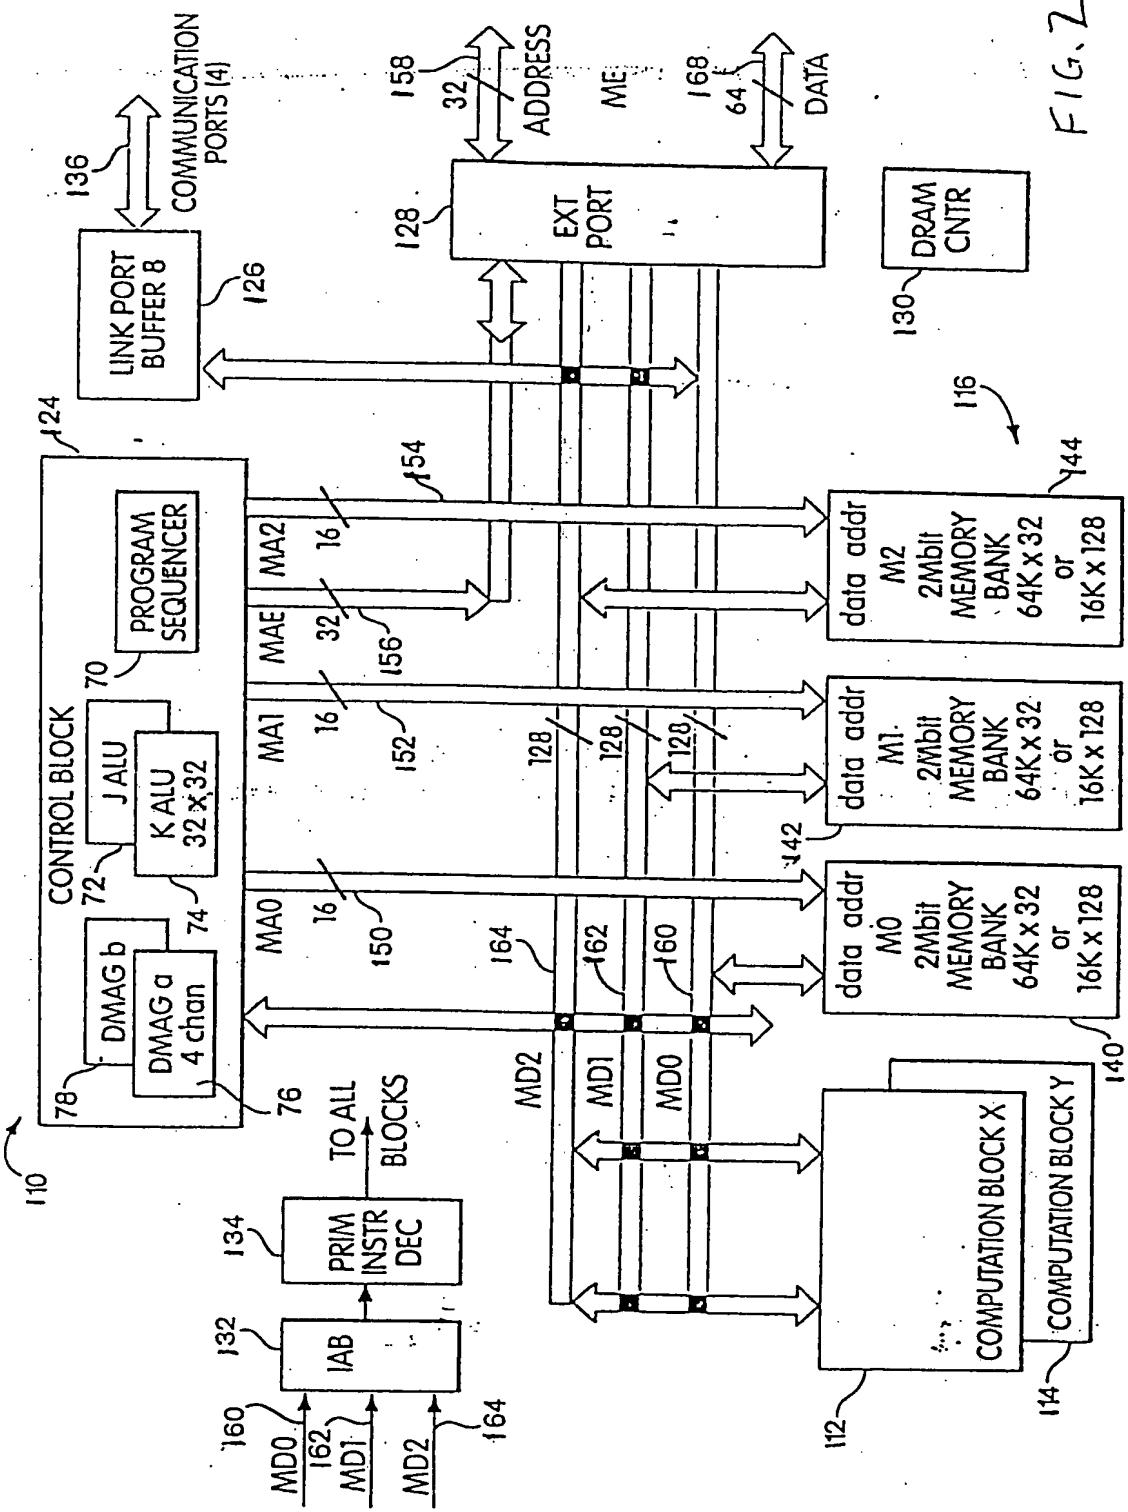


FIG. 2

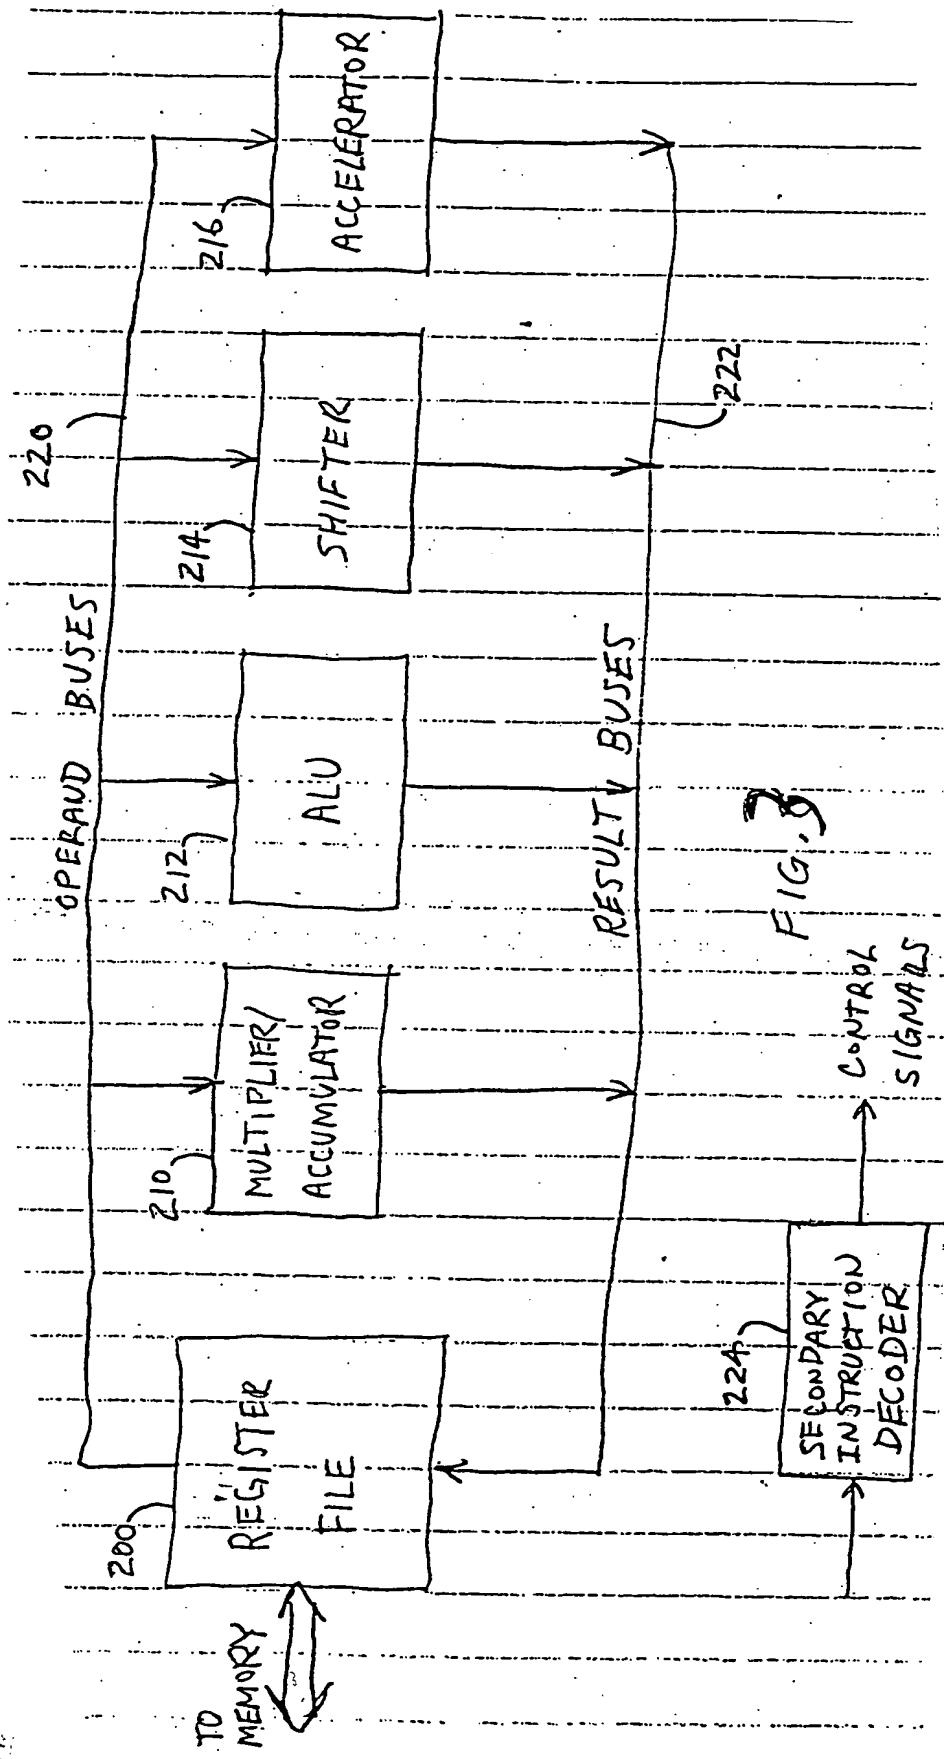


FIG. 3

Control  
signals

20000000000000000000000000000000

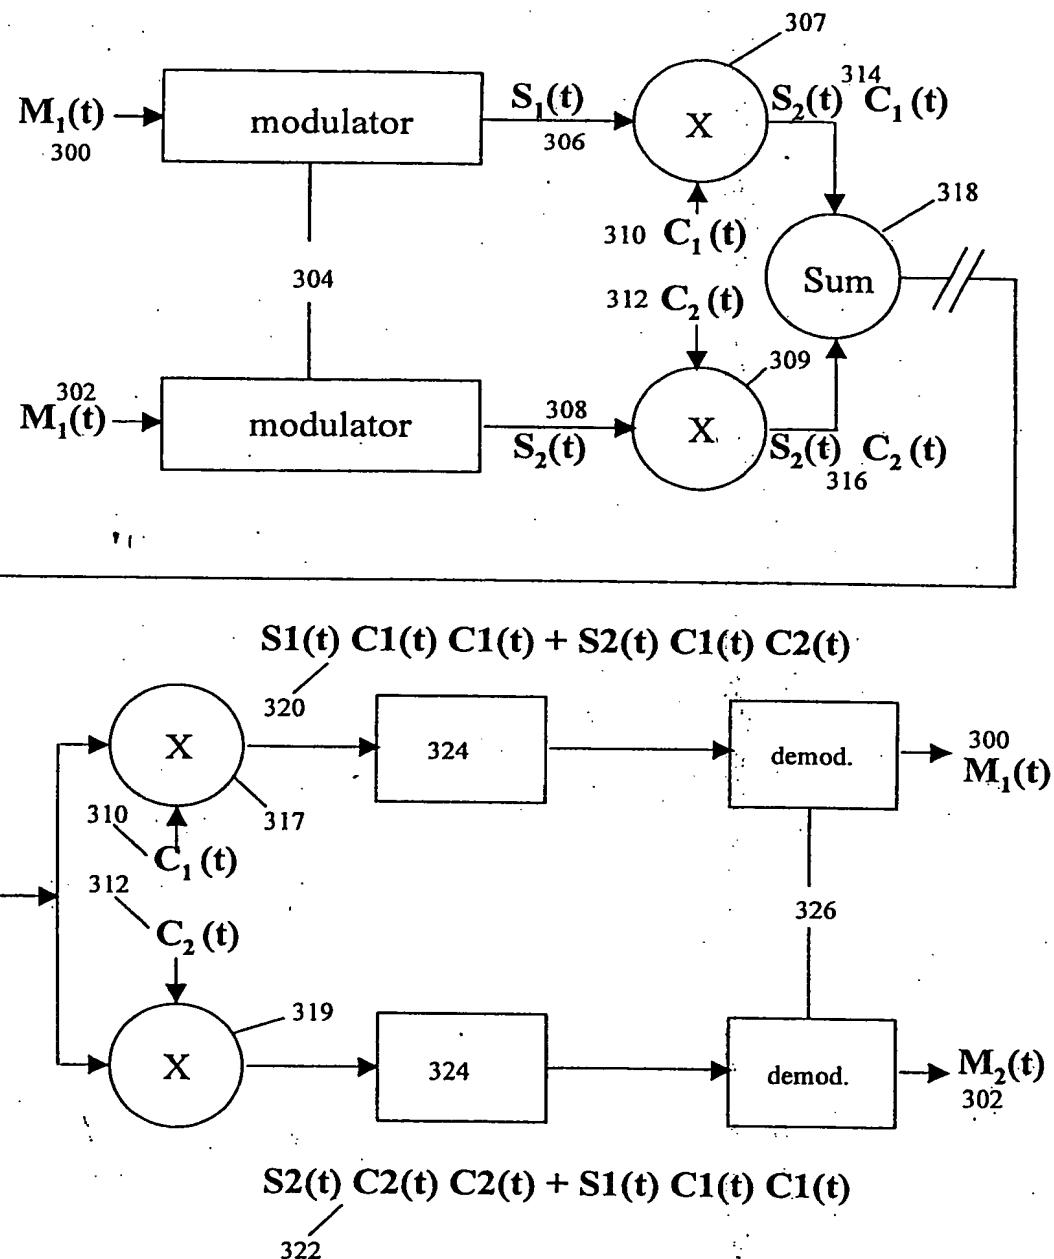


FIG. 4

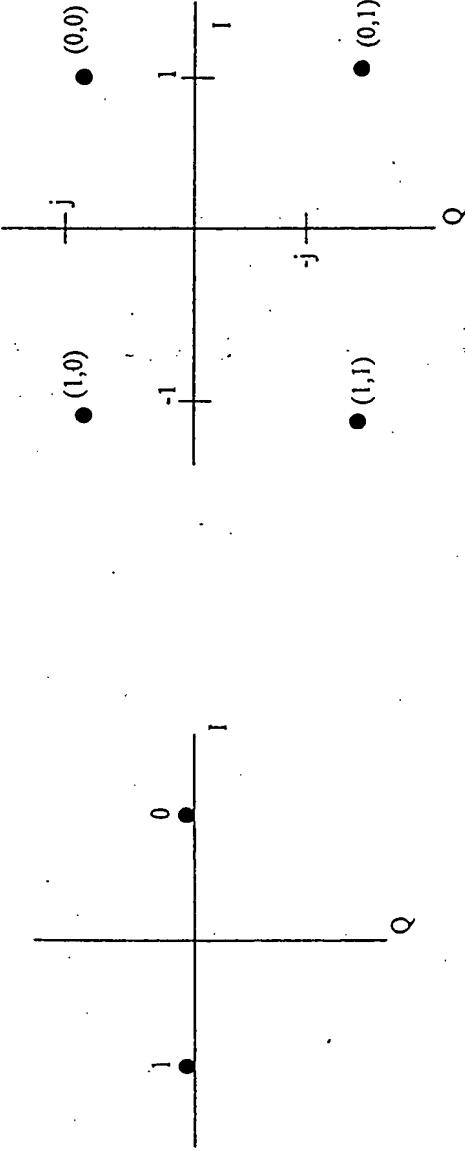


FIG. 5

FIG. 6.

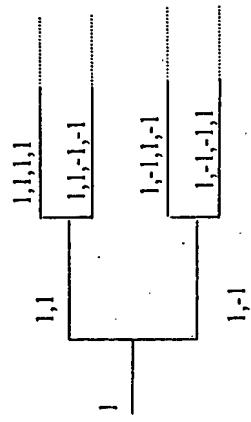


FIG. 7

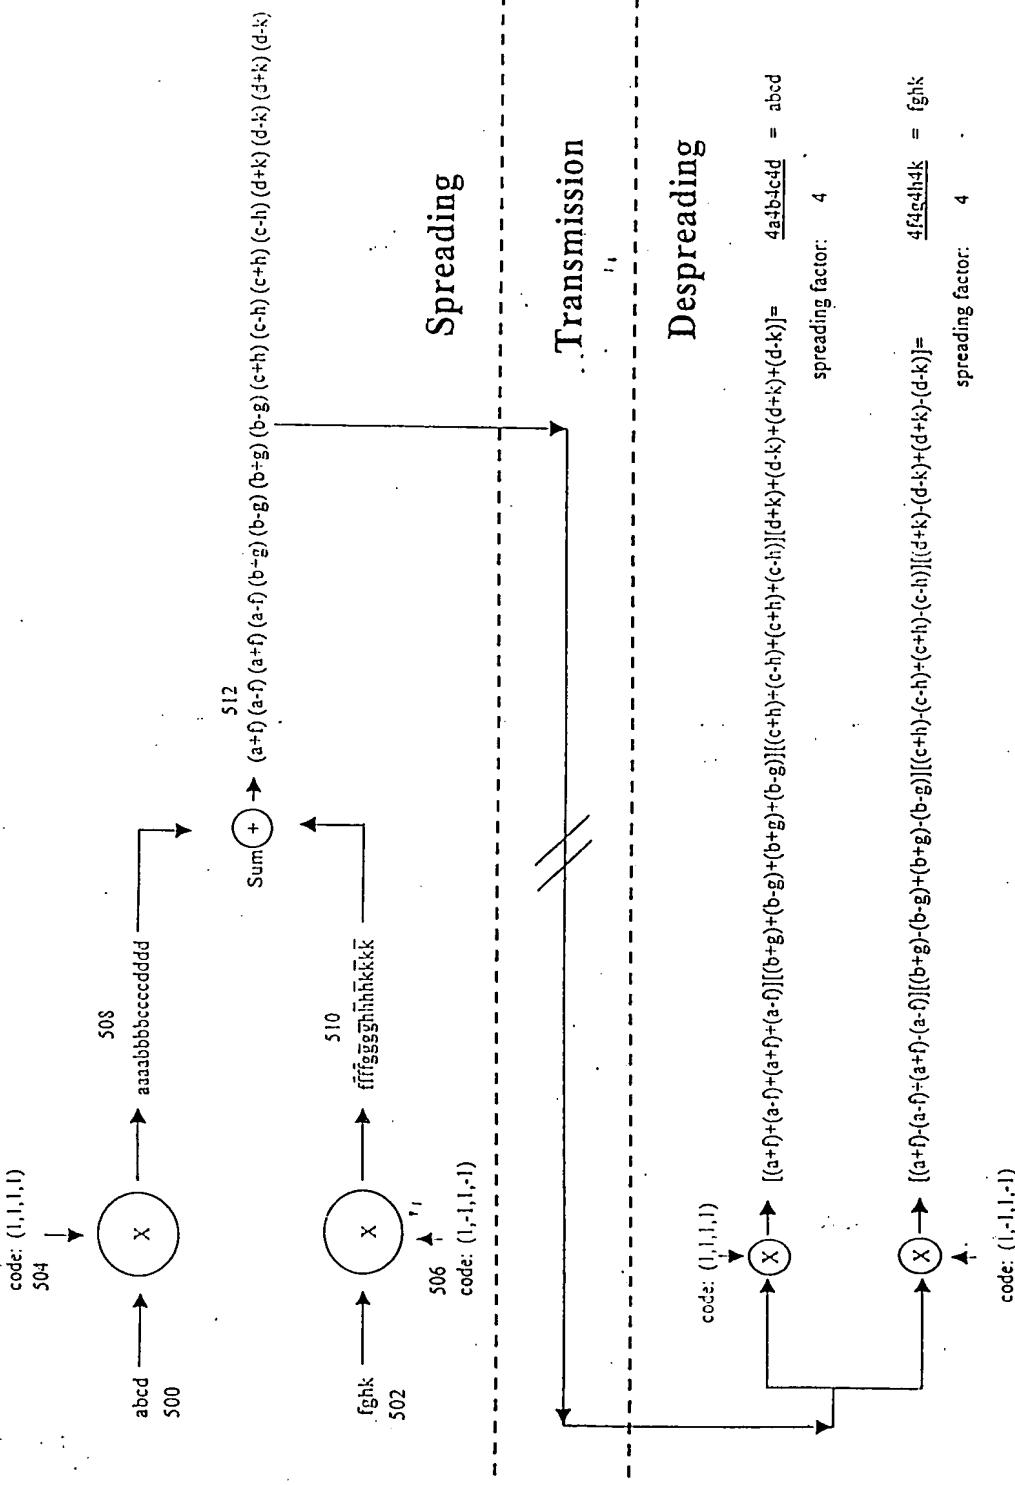
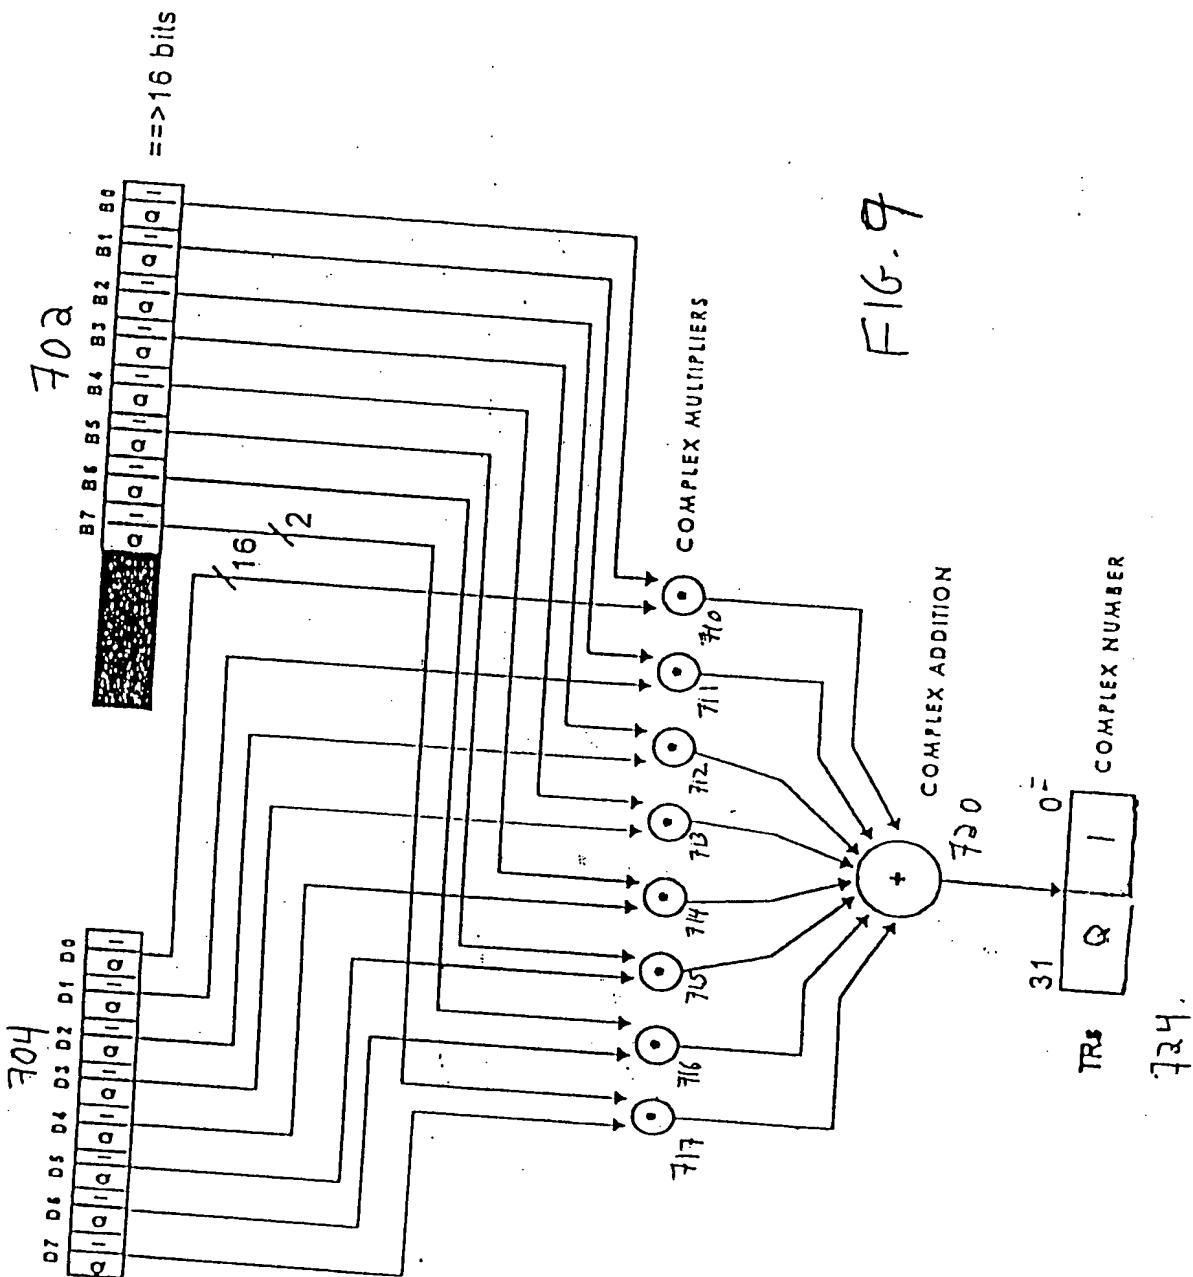


FIG. 8

FIG. 9



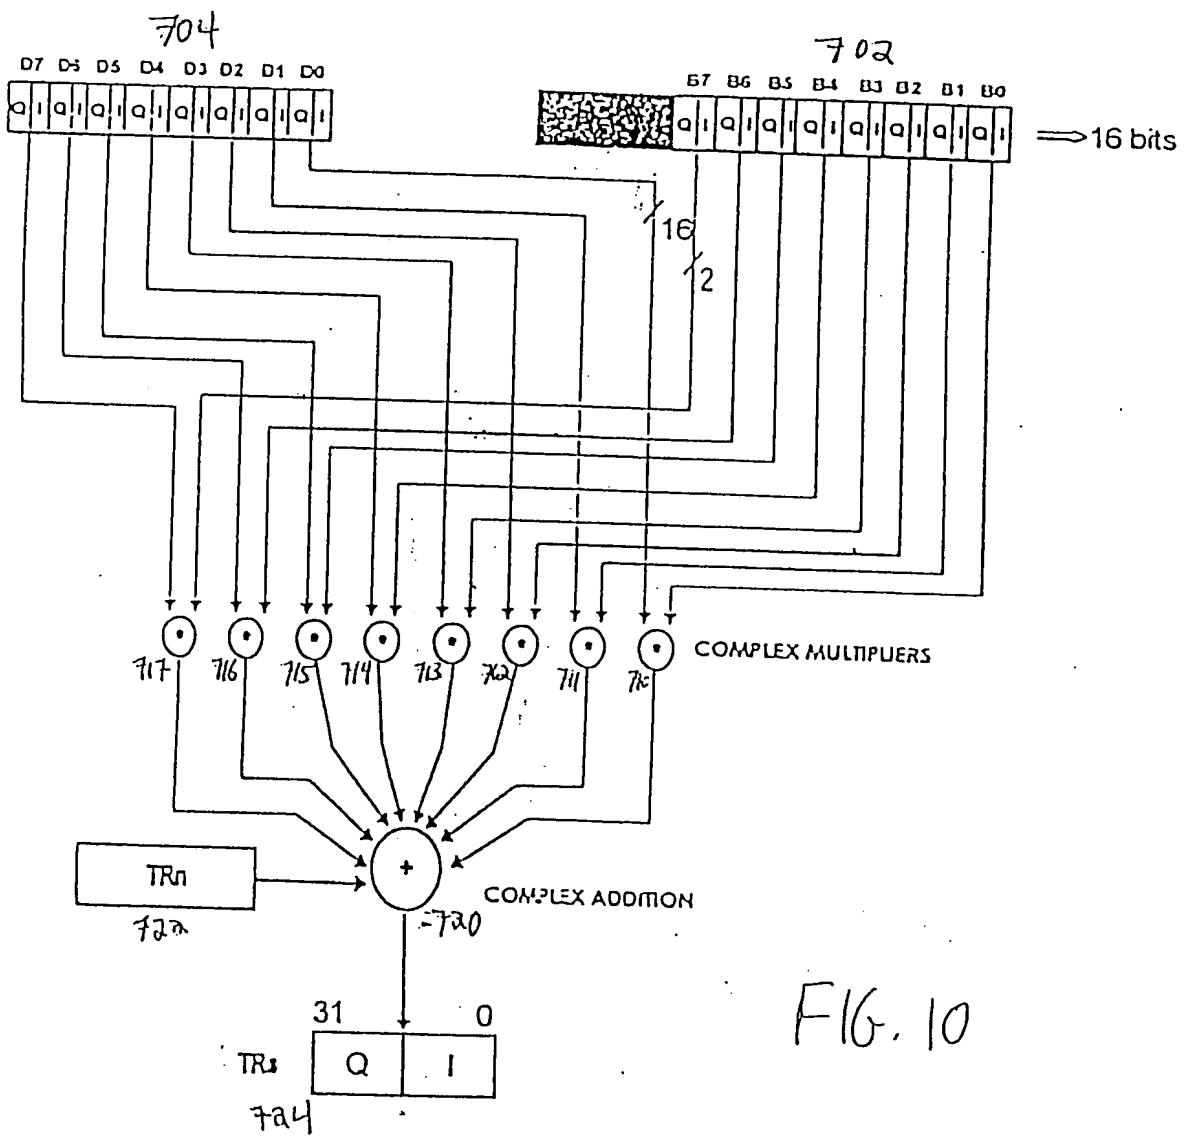


FIG. 10

603 TR0 = DESPREAD (R3:0, THR1:0);  
604 XTR0 = DESPREAD (R7:4, THR1:0) + TR0; XR3:0 = SDAB Q[J0+=8];;  
605 XTR0 = DESPREAD (R3:0, THR1:0) + TR0; XR7:4 = SDAB Q[J0+=8];;  
606 XTR0 = DESPREAD (R7:4, THR1:0) + TR0; XR3:0 = SDAB Q[J0+=8];;  
607 XTR0 = DESPREAD (R19:18 (I)); XR7:4 = SDAB Q[J0+=8];

Fig. 11

20 மூலம் கணக்கேற்றுவது

